

# Tankmasta

## Care & Maintenance - Accessories

### Underground tank warranty

Tankmasta™ underground water storage tanks are warranted for a period of seven years against faulty workmanship and/or material fault, provided the installation is conducted by an accredited installer.

Underground installations are subject to a range of conditions that vary from site to site. As a result we recommend that all installations be independently assessed by a suitably qualified person to establish how best to approach the unique features of the installation site.

Compliance with Federal, State and Local Authorities regulations, guidelines and the application for planning permits where applicable is the responsibility of the purchaser.

### Summary of conditions:

- 1) LINPAC Rotational Mouldings Pty Ltd warrants that its tanks are free from defects caused by faulty material and/or workmanship during the manufacture of the tank.
- 2) LINPAC Rotational Mouldings Pty Ltd warrants that its tanks will be fit for the purpose for which they were designed, namely storing rain/storm water, for a period of seven years from the date of purchase.
- 3) This warranty will not apply where:
  - The tank is damaged on site or during any movement or relocation.
  - Where the tank is installed by an unqualified/non accredited installer
  - The warranty form, complete with the accredited installer reference number, is not returned to LINPAC Rotational Mouldings Pty Ltd within 21 days of the installation being completed.


### Care & Maintenance instructions

LINPAC's flow-through barrel filters mean that our undergrounds are very low in maintenance. However we do recommend that the purchaser give consideration to their local conditions and establish a maintenance program based on their individual catchment conditions.

If deemed necessary, the quantity of fine particles entering the tank can be reduced by installing a first flush or continuous diverter. Another option is to install an in-line cartridge filter after the pump which will remove particles and impurities from the water. This option can be of particular benefit if the water is being used in household appliances.

With even the most basic maintenance program, your underground tank should provide you with decades of trouble free service.

### Adjustable Riser

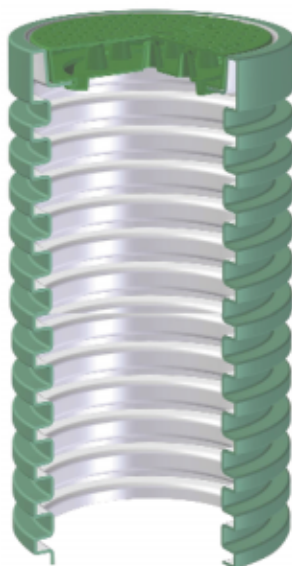

### Adjustable Collar & Riser

Tankmasta underground tanks are designed to be installed with their inlet cover at ground level. Unfortunately, this is not always achievable, so Tankmasta offer solutions to the problem of varying inlet heights.

### Adjustable Collar

Overall height adjustment 100mm to 75mm. An adjustable collar is used to make minor adjustments to the inlet height & level. i.e

- Ensuring the inlet cover is flush with the concrete even if the base is not level
- To raise the inlet slightly to prevent surface run-off entering the tank



### Adjustable Riser

Overall height adjustment up to 600mm. The adjustable riser is used to raise the tank inlet height e.g.

- To install the tank at the depth of the existing pipe work.
- When the tank inlet is situated in a raised garden bed.

This installation overview was compiled by LINPAC Tankmasta in consultation with Connell Wagner Pty Ltd & D & G Berry & consultants Pty Ltd.

For additional information please call LINPAC Tankmasta on 1800 775 000.